





Lecture 2: iDRAC

Integrated Dell Remote Access Controller






Firmware and Remote Access

- Enterprise computers usually have a way of remotely performing tasks you would normally have to sit in front of the computer to accomplish, e.g. turning it on and off again, changing the BIOS settings, etc.
- When you have thousands of machines its not practical to go to each physical machine in person.
- We are using Dell Poweredge R620 blade servers so we will use iDRAC to configure them.
- iDRAC is a little Linux installation running in **firmware** on separately from the operating system or BIOS on memory chip (not harddrive).

- Favorites
 - Accessories
 - CST Studio Suite 2022
 - Documentation
 - Internet
 - Office
 - Programming
 - Sound & Video
 - Sundry
 - System Tools
 - Utilities
 - Other
-  Chromium Web Browser
 -  Empathy
 -  Firefox
 -  Zoom



🔍 Search Google or type a URL 🔊 🌐

- 
https://fricke...
- 
https
- 
GitHub
- 
Web Store
- 
Add shortcut



Your connection is not private

Attackers might be trying to steal your information from **129.24.245.21** (for example, passwords, messages, or credit cards). [Learn more](#)

NET::ERR_CERT_AUTHORITY_INVALID


To get Chrome's highest level of security, [turn on enhanced protection](#)

Hide advanced

Back to safety

This server could not prove that it is **129.24.245.21**; its security certificate is not trusted by your computer's operating system. This may be caused by a misconfiguration or an attacker intercepting your connection.

[Proceed to 129.24.245.21 \(unsafe\).](#)



Integrated Dell Remote Access Controller 7 Enterprise

Login ?

IDRAC-HR3SLV1 | PowerEdge R620

Type the Username and Password and click Submit.

Username: Password:

Domain:

System
PowerEdge R620
root, Admin

- Overview
- Server**
 - Logs
 - Power / Thermal
 - Virtual Console
 - Alerts
 - Setup
 - Troubleshooting
 - Licenses
 - Intrusion
 - iDRAC Settings
 - Hardware
 - Storage
 - Host OS

Properties Attached Media vFlash Service Module Job Queue


Summary Details System Inventory

System Summary

Server Health

- Batteries
- Fans
- Intrusion
- Power Supplies
- Removable Flash Media
- Temperatures
- Voltages

Virtual Console Preview



- > Settings
- > Refresh
- > Launch

Server Information

Power State	ON
System Model	PowerEdge R620
System Revision	I
System Host Name	localhost
Operating System	
Operating System Version	
Service Tag	6R3SLV1
Express Service Code	14699654317
BIOS Version	1.2.6
Firmware Version	2.65.65.65
IP Address(es)	129.24.245.18
iDRAC MAC Address	24:B6:FD:F6:2E:3C
DNS Domain Name	
Lifecycle Controller Firmware	2.65.65.65
iSDM Firmware Version	N/A
Location	

Quick Launch Tasks

- Power ON / OFF
- Power Cycle System (cold boot)
- System ID LED ON/OFF
- View Logs
- Update and Rollback
- Reset iDRAC

System
PowerEdge R620
root, Admin

Properties Attached M
Summary Details

Overview

- Server
 - Logs
 - Power / Thermal
 - Virtual Console
 - Alerts
 - Setup
 - Troubleshooting
 - Licenses
 - Intrusion
 - iDRAC Settings
 - Hardware
 - Storage
 - Host OS

System Summary

Server Health

- Battery
- Fans
- Intrusion
- Power
- Remote

Server Information

- Power State
- System Model
- System Revision
- System Host Name
- Operating System
- Operating System Ver
- Service Tag
- Express Service Cod
- BIOS Version
- Firmware Version
- IP Address(es)
- iDRAC MAC Address
- DNS Domain Name
- Lifecycle Controller F
- IDSDM Firmware Ver
- Location


viewer (1).jnlp

- > Settings
- > Refresh
- > Launch

Show all

129.24.245.18 says
Turn off your pop-up blocker and try again!

OK

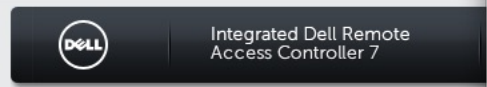

System
PowerEdge R620
root, Admin

Overview

- Server
 - Logs
 - Power / Thermal
 - Virtual Console
 - Alerts
 - Setup
 - Troubleshooting
 - Licenses
 - Intrusion
 - iDRAC Settings
 - Hardware
 - Storage
 - Host OS

Chat Keyboard Screen Capture Refresh Full Screen Connect Virtual Media Disconnect Viewer Console Controls

Pop-ups were blocked on this page. Support | Dell TechCenter | About | Logout

Properties Attached M

Summary Details

System Summary

Server Health

- Battery
- Fans
- Intrusion
- Power
- Remote

Server Information

- Power State
- System Model
- System Revision
- System Host Name
- Operating System
- Operating System Ver
- Service Tag
- Express Service Cod
- BIOS Version
- Firmware Version
- IP Address(es)
- iDRAC MAC Address
- DNS Domain Name
- Lifecycle Controller F
- IDSDM Firmware Ver
- Location

Settings

Refresh

Launch

Integrated Dell Remote Access Controller 7

System
PowerEdge R620
root, Admin

Overview

- Server
 - Logs
 - Power / Thermal
 - Virtual Console
 - Alerts
 - Setup
 - Troubleshooting
 - Licenses
 - Intrusion
 - iDRAC Settings
 - Hardware
 - Storage
 - Host OS

Properties Attached M
Summary Details

System Summary

Server Health

- Battery
- Fans
- Intrusion
- Power
- Remote

Server Information

- Power State
- System Model
- System Revision
- System Host Name
- Operating System
- Operating System Ver
- Service Tag
- Express Service Cod
- BIOS Version
- Firmware Version
- IP Address(es)
- iDRAC MAC Address
- DNS Domain Name
- Lifecycle Controller F
- IDSDM Firmware Ver
- Location
- License

Chat Keyboard Screen Capture Refresh Full Screen Connect Virtual


Pop-ups blocked:

- <https://129.24.2...:18:5900/index.html>
- Always allow pop-ups and redirects from https://129.24.245.18
- Continue blocking

Manage Done

Support | Dell TechCenter | About | Logout

 Settings Refresh Launch



System
PowerEdge R620
root, Admin

Overview

- Server
 - Logs
 - Power / Thermal
 - Virtual Console
 - Alerts
 - Setup
 - Troubleshooting
 - Licenses
 - Intrusion
 - iDRAC Settings
 - Hardware
 - Storage
 - Host OS

Properties Attached M

Summary Details

System Summary

Server Health

- Battery
- Fans
- Intrusion
- Power
- Remote

Server Information

- Power State
- System Model
- System Revision
- System Host Name
- Operating System
- Operating System Ver
- Service Tag
- Express Service Cod
- BIOS Version
- Firmware Version
- IP Address(es)
- iDRAC MAC Address
- DNS Domain Name
- Lifecycle Controller F
- IDSDM Firmware Ver
- Location
- License

Chat Keyboard Screen Capture Refresh Full Screen Connect Virtual Media Disconnect Viewer Console Controls

viewer (1).jnlp

Print Refresh Help

- > Settings
- > Refresh
- > Launch

Show all

System Summary

Server Health

- ✔ Batteries
- ✔ Fans
- ✔ Intrusion
- ✔ Power Supplies
- ✔ Removable Flash Media
- ✔ Temperatures
- ✔ Voltages

Virtual Console Preview




- [Settings](#)
- [Refresh](#)
- [Launch](#)

Server Information

Power State	ON
System Model	PowerEdge R620
System Revision	I
System Host Name	localhost
Operating System	
Operating System Version	
Service Tag	6R3SLV1
Express Service Code	14699654317
BIOS Version	1.2.6
Firmware Version	2.65.65.65
IP Address(es)	129.24.245.18
iDRAC MAC Address	24:B6:FD:F6:2E:3C
DNS Domain Name	
Lifecycle Controller Firmware	2.65.65.65
IDSDM Firmware Version	N/A

Quick Launch Tasks

- Power ON / OFF
- Power Cycle System (cold boot)
- System ID LED ON/OFF
- View Logs
- Update and Rollback
- Reset iDRAC

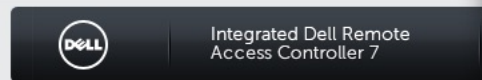

System
PowerEdge R620
root, Admin

Properties Attached M
Summary Details

- Overview
- Server
 - Logs
 - Power / Thermal
 - Virtual Console
 - Alerts
 - Setup
 - Troubleshooting
 - Licenses
 - Intrusion
 - iDRAC Settings
 - Hardware
 - Storage
 - Host OS

System Summary

```
Rocky Linux 9.3 (Blue Dnpx)
kernel 5.14.0-362.0.1.el9_3.x86_64 on an x86_64
localhost login: [ 25.605387] block dr=0: the capability attribute has been deprecated.
```

Server Health

 
- Battery
- Fans
- Intrusion
- Power
- Remote

Server Information

- Power State
- System Model
- System Revision
- System Host Name
- Operating System
- Operating System Version
- Service Tag
- Express Service Code
- BIOS Version
- Firmware Version
- IP Address(es)
- iDRAC MAC Address
- DNS Domain Name
- Lifecycle Controller Firmware
- IDSDM Firmware Version

https://129.24.245.18/sysSummaryData.html#

viewer (1).jnlp



- > Settings
- > Refresh
- > Launch

Show all x

- System
 - PowerEdge R620
 - root , Admin
- Overview
- Server
 - Logs
 - Power / Thermal
 - Virtual Console
 - Alerts
 - Setup
 - Troubleshooting
 - Licenses
 - Intrusion
- iDRAC Settings
- Hardware
 - Batteries
 - Fans
 - CPU
 - Memory
 - Front Panel**
 - Network Devices
 - Power Supplies
 - Removable Flash Media
- Storage
- Host OS

Front Panel

Front Panel

Jump to: [Live Front Panel Feed](#) | [LCD Settings](#) | [System ID LED Settings](#)

Live Front Panel Feed

Instructions: This is a live feed of the current display on the Front Panel. Use this section to hide or unhide the current error messages from the LCD screen (this does not prevent future error messages from appearing on the LCD).

System ID LED: LCD Screen: **Gibbs24**

[Unhide Errors](#) [Hide Current Errors](#)

LCD Settings

Instructions: Use this section to set the LCD home message.

Set Home Message:

Enable Virtual Console Indication

[Cancel](#) [Apply](#) [Back to Top](#)

System ID LED Settings

Instructions: Use this section to identify the server by its blinking System ID LED.

System ID LED:


[Cancel](#) [Apply](#) [Back to Top](#)

System
PowerEdge R620
root, Admin

- Overview
- Server
- Logs
- Power / Thermal**
- Virtual Console
- Alerts
- Setup
- Troubleshooting
- Licenses
- Intrusion
- + iDRAC Settings
- + Hardware
- + Storage
- + Host OS

Power Monitoring | Power Configuration | Voltages | Temperatures

Power ▲ Back to Top

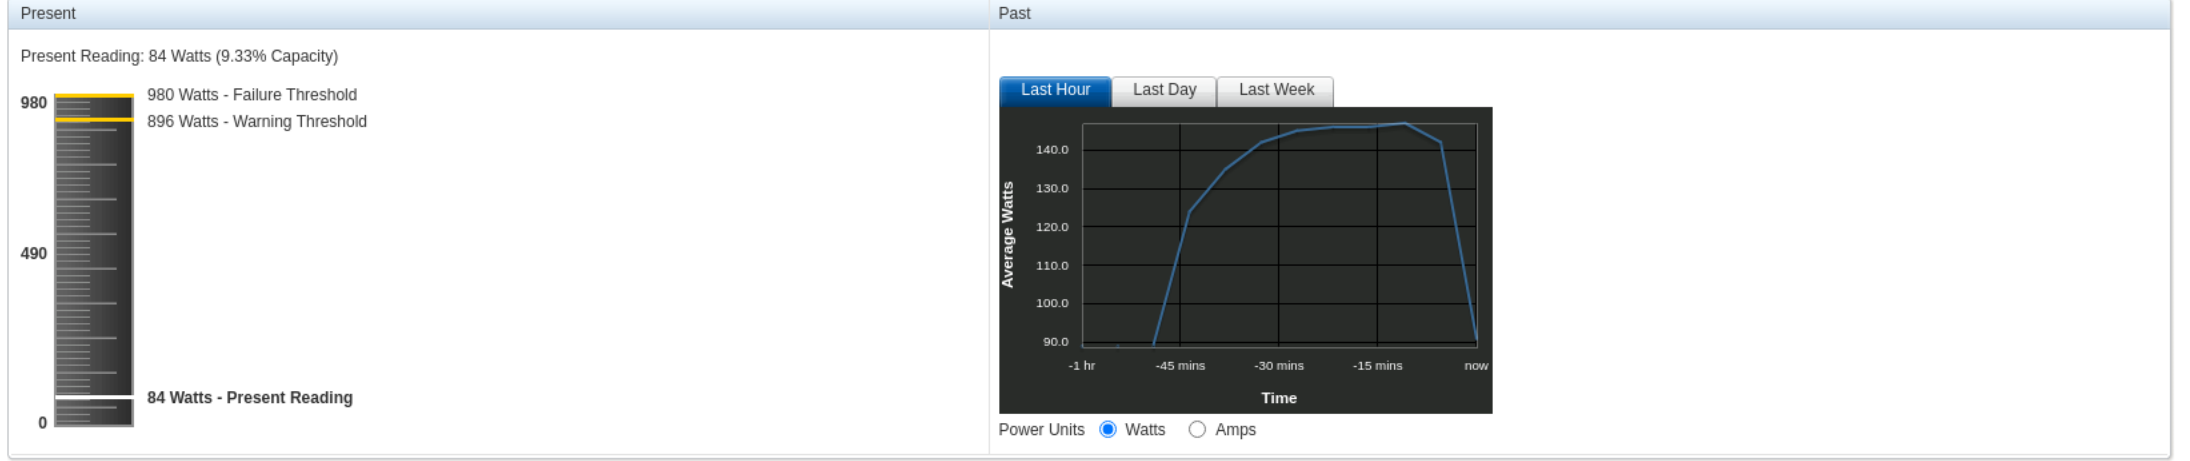

Present Power Reading and Thresholds ▲ Back to Top

Status	Probe Name	Present Reading	Warning Threshold	Failure Threshold
✓	System Board Pwr Consumption	84 W 287 BTU/hr	896 W 3058 BTU/hr	980 W 3345 BTU/hr

Power Supply Unit Readings ▲ Back to Top

Name	Amps	Volts
PS1	0.6	210

Cumulative Reading ▲ Back to Top

Time	Total Usage
------	-------------

System
PowerEdge R620
root, Admin

- Overview
- Server
 - Logs
 - Power / Thermal
 - Virtual Console
 - Alerts
 - Setup
 - Troubleshooting
 - Licenses
 - Intrusion
 - iDRAC Settings
 - Hardware
 - Storage
 - Host OS

Properties Attached Media vFlash Service Module Job Queue


Summary Details System Inventory

System Summary

Server Health

- Batteries
- Fans
- Intrusion
- Power Supplies
- Removable Flash Media
- Temperatures
- Voltages

Virtual Console Preview



- > Settings
- > Refresh
- > Launch

Server Information

Power State	ON
System Model	PowerEdge R620
System Revision	1
System Host Name	localhost
Operating System	
Operating System Version	
Service Tag	2Y2SLV1
Express Service Code	6414108589
BIOS Version	1.2.6
Firmware Version	2.65.65.65
IP Address(es)	129.24.245.28
iDRAC MAC Address	24:B6:FD:F6:79:B6
DNS Domain Name	
Lifecycle Controller Firmware	2.65.65.65
IDSDM Firmware Version	N/A
Location	
Licenses	<input checked="" type="checkbox"/> Enterprise

Quick Launch Tasks

- Power ON / OFF
- [Power Cycle System \(cold boot\)](#)
- System ID LED ON/OFF
- View Logs
- Update and Rollback
- Reset iDRAC

129.24.245.28 says

You are about to execute a server control action. Are you sure you want to continue?

Cancel OK

System PowerEdge R620 root, Admin

Properties Attached Media vFlash Service Module Job Queue

Summary Details System Inventory

System Summary

- Overview
- Server
 - Logs
 - Power / Thermal
 - Virtual Console
 - Alerts
 - Setup
 - Troubleshooting
 - Licenses
 - Intrusion
 - iDRAC Settings
 - Hardware
 - Storage
 - Host OS

Server Health

- Batteries
- Fans
- Intrusion
- Power Supplies
- Removable Flash Media
- Temperatures
- Voltages

Virtual Console Preview



- > Settings
- > Refresh
- > Launch

Server Information

Power State	ON
System Model	PowerEdge R620
System Revision	I
System Host Name	localhost
Operating System	
Operating System Version	
Service Tag	2Y2SLV1
Express Service Code	6414108589
BIOS Version	1.2.6
Firmware Version	2.65.65.65
IP Address(es)	129.24.245.28
iDRAC MAC Address	24:B6:FD:F6:79:B6
DNS Domain Name	
Lifecycle Controller Firmware	2.65.65.65
IDSDM Firmware Version	N/A
Location	
Licenses	<input checked="" type="checkbox"/> Enterprise

Quick Launch Tasks

- Power ON / OFF
- [Power Cycle System \(cold boot\)](#)
- System ID LED ON/OFF
- View Logs
- Update and Rollback
- Reset iDRAC

Rocky Linux 9.3

Install Rocky Linux 9.3

Test this media & install Rocky Linux 9.3

Troubleshooting




Press Tab for full configuration options on menu items.

WELCOME TO ROCKY LINUX 9.3.



What language would you like to use during the installation process?

English	English	English (United States)
العربية	Arabic	English (United Kingdom)
Français	French	English (India)
Deutsch	German	English (Australia)
日本語	Japanese	English (Canada)
中文	Mandarin Chinese	English (Denmark)
Русский	Russian	English (Ireland)
Español	Spanish	English (New Zealand)
Afrikaans	Afrikaans	English (Nigeria)
አማርኛ	Amharic	English (Hong Kong SAR China)
অসমীয়া	Assamese	English (Philippines)
Asturiano	Asturian	English (Singapore)
Беларуская	Belarusian	English (South Africa)
Български	Bulgarian	English (Zambia)
বাংলা	Bangla	English (Zimbabwe)
Català	Catalan	English (Botswana)
Čeština	Czech	English (Antigua & Barbuda)
Cymraeg	Welsh	English (Israel)
Dansk	Danish	
Ελληνικά	Greek	
Esperanto	Esperanto	
Eesti	Estonian	
Euskara	Basque	
فارسی	Persian	
Suomi	Finnish	

LOCALIZATION

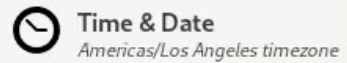

USER SETTINGS

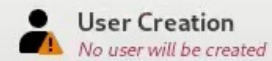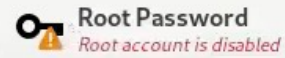

SOFTWARE



SYSTEM



LOCALIZATION



Keyboard
English (US)



Language Support
English (United States)



Time & Date
Americas/Los Angeles timezone

USER SETTINGS



Root Password
Root account is disabled



User Creation
No user will be created

SOFTWARE



Installation Source
Local media



Software Selection
Server with GUI

SYSTEM



Installation Destination
Automatic partitioning selected



KDUMP
Kdump is enabled



Network & Host Name
Connected: enp1s0



Security Profile
Not ready



The root account is used for administering the system. Enter a password for the root user.

Root Password:



Too short

Confirm:



- Lock root account
- Allow root SSH login with password

The root account is used for administering the system. Enter a password for the root user.

Root Password:



Too short

Confirm:




- Lock root account
- Allow root SSH login with password




LOCALIZATION

 **Keyboard**
English (US)

 **Language Support**
English (United States)

 **Time & Date**
Americas/Los Angeles timezone

USER SETTINGS

 **Root Password**
Root account is disabled

 **User Creation**
No user will be created

SOFTWARE

 **Installation Source**
Local media

 **Software Selection**
Server with GUI


SYSTEM

 **Installation Destination**
Automatic partitioning selected

 **KDUMP**
Kdump is enabled

 **Network & Host Name**
Connected: enp1s0

 **Security Profile**
Not ready

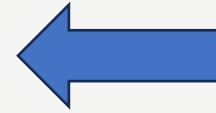

Device Selection

Select the device(s) you'd like to install to. They will be left untouched until you click on the main menu's "Begin Installation" button.

Local Standard Disks

20 GiB



0x1af4

vda / 20 GiB free

Specialized & Network Disks



Add a disk...

Storage Configuration

Automatic Custom

I would like to make additional space available.

Encryption

Encrypt my data. *You'll set a passphrase next.*

⌂ Downloading packages

